




store your future

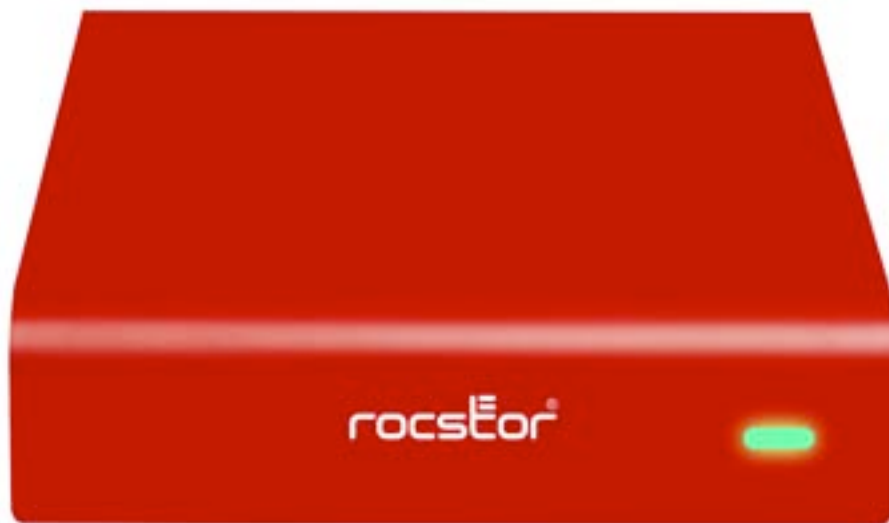

ROCPRO 900
User Manual

TABLE OF CONTENTS

IMPORTANT NOTICES	4
• Safety Notices	4
• General Notices	
• Capacity Disclaimer	4
• Care and Handling	4
GENERAL	6
• Introduction	6
• Box Contents	6
• Minimum System Requirements	6
• Connectors and Rocpro rear view	6
QUICK INSTALLATION	8
• How to Connect the Interface Cables - Connecting the Drive	8
• Cable Types: FireWire 800, FireWire 400, and USB	9
INSTALLING YOUR DRIVE	10
• Rocpro as a bootable device	10
• Disconnecting Your Drive	10
○ PC	10
○ Mac	11
• Reformatting Your Drive	11
○ Reformatting via PC (Window based computers)	11
○ Reformatting via Mac	11
• Important Note	11
• How to Daisy-Chain through FireWire ports to your Rocpro Drive at one time	12
PARTITIONING AND FORMATTING THE ROCPRO DRIVE ON A MAC OS	13
• Warning	13
• Important Notes	13
• Instructions for Partitioning and Formatting from FAT 32 to HFS+	13
PARTITIONING & FORMATTING the ROCPRO Drive on WINDOWS 2000, XP and VISTA	20
• Warning	20
• Important Notes	20
• Different ways to get to the Control Panel	21
• Instructions upon reaching the Control Panel	23
• Instructions for Partitioning and Formatting from FAT 32 to NTFS	24
TROUBLESHOOTING	31

• Troubleshooting for Macintosh computers	31
• Troubleshooting for PC Windows based computers	33
KNOWLEDGE BASE	35
• Rocpro 900 Unique Features	35
• Specifications	36
• Introduction to Interfaces (ports) and Cables	37
○ FireWire (IEEE 1394)	37
○ USB (Universal Serial Bus)	39
○ Comparison Chart	40
• Introduction to Formatting	41
○ File Allocation Table (FAT) and FAT 32	41
○ HFS Plus or HFS+	42
LIMITED WARRANTY	43
TECHNICAL SUPPORT	46
ACKNOWLEDGEMENTS	47
• Trademarks	47
• Copyrights	47
CONTACT INFORMATION	48
• Corporate Headquarters	48
• Technical Support / Return Authorization “RMA”	48
• Sales Info	48

IMPORTANT NOTICES

Safety Notices

- The warranty is void if an unauthorized person attempts and/or repairs the hard disk drive.
- Read all Manuals and instructions carefully before using the device.
- Do not spill any liquid or insert any object into the device.
- Use the device within the specifications indicated, including but not limited to: power requirements, temperature, humidity, sunlight and magnetism from other devices such as computers and televisions.
- Please visit the Rocstor website, www.rocstor.com for further information concerning specifications and use of the device.

General Notices

- Consistently make multiple backup copies of your data for your protection. Hard disk drives are subject to failure at any time.
- Rocstorage, Inc. shall not be held liable for loss of data or the restoration or recovery of data on the device. Please view complete Limited Warranty Information in this manual or on the Rocstor website (www.rocstor.com) for further details.

Capacity Disclaimer

Actual accessible hard drive capacity will indicate up to 10% lower than stated under different Operating Systems and formatting.

The storage volume is measured in total bytes before formatting. References to round numbers of gigabytes or terabytes are an approximation only. For example, a disk drive labeled as having 500GB (gigabytes) has space for approximately 500,000,000,000 bytes before formatting. After formatting, the drive capacity is reduced by about 5% to 10% depending on the operating system and formatting used.

Care and Handling

The following instructions concern the proper care and handling of Rocpro 850 Drives. Please take a moment to review these instructions.

- As with any storage solution, it is recommended that all data be backed up regularly.
- Ensure that you follow the proper removal procedure to disconnect the Rocpro drive.
- Do not move or disconnect this device from your computer while it is reading or writing data. This may cause damage to the Rocpro drive.
- Do not place this device near a heat source or expose it to direct flame.
- Do not place the device near any equipment generating strong electromagnetic fields. Exposure to strong electromagnetic fields may cause the device to malfunction or data to be corrupted.
- Do not drop or cause shock to your Rocpro drive.
- Do not spill any liquid or insert any object into the device.

- Do not attempt to disassemble and service the Rocpro drive during the warranty period.
- Please read the Safety Notices and Limited Warranty information in this Manual and on the Rocstor website (www.rocstor.com) for further details.



GENERAL

Introduction

ROCPRO 900 – 2x FireWire 800 and 1x USB3 (2.0)

The new generation of Rocpro external SATA Hard Drives delivers extraordinary performance and reliability for both Mac and PC users. Specifically designed for demanding audio/video professionals, the new Rocpro 900 contains a fast SATA high capacity 3.5" drive in a stylish and unique aluminum case that can be stacked or mounted vertically. With its built-in power supply, fan-less and quiet operation, the Rocpro 900 can be easily moved from one desktop environment to another using the provided carrying case.



Choose Rocstor drives and store your future.

Box Contents

- External hard disk drive
- Stand for vertical mounting
- USB 3 cable
- 9-pin to 9-pin FireWire 800 (1394b) cable
- AC power cord
- Installation user Guide
- Carrying case



Minimum System Requirements

Mac Users:

Hardware: FireWire* (400 or 800) or USB 3 (2.0) port(s.)

Mac: PowerPC or Intel processor running Mac OS 9, X, (Snow) Leopard

Recommended memory: 512 MB RAM

Window Users:

Hardware: FireWire* (400 or 800) or USB 3 (2.0) port(s.)


Operating Systems: Microsoft Windows 2000, Me, XP, Vista, or Windows 7

Recommended memory: 512 MB RAM

* Many computers do not come with factory installed FireWire 800 or eSATA ports. Therefore, you may need to purchase a PCI, PCI-X or PCI-Express card to use these ports. Rocstor offers a variety of accessories to work with PC Windows or Mac based Computers. Please visit us at www.ROCSTOR.com

Connectors


- FireWire 800 (IEEE 1394b) port x2
(You may connect FireWire 800 to a FireWire 400 port via a special cable {also read page 12})
- Standard AC power input connection
- ON/OFF power switch
- USB 3 port x1

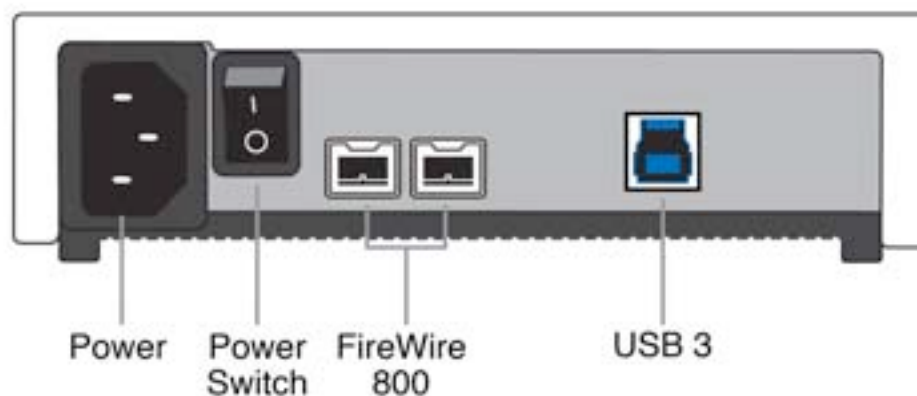

QUICK INSTALLATION

How to Connect the Interface Cables - Connecting the Drive

1. Turn ON your computer and wait until it fully boots up to load all programs.
2. Connect one end of the power cord directly to the Rocpro 900 and the other end to an AC outlet, surge protector or battery Backup (UPS).

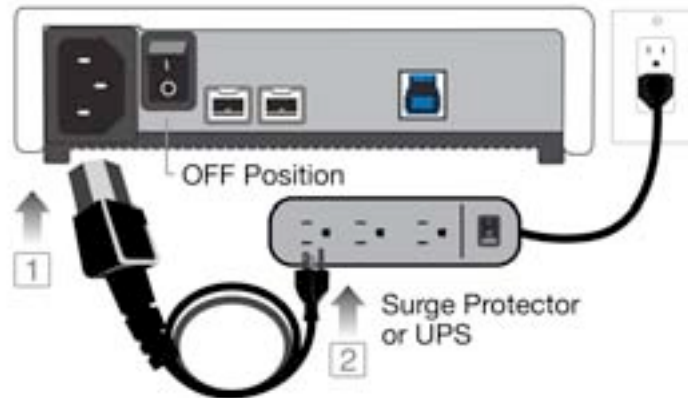

3. Using only one interface cable at a time, select the interface port you wish to use on your computer. Connect one end of the cable to the Rocpro 900 and the other end to the computer. Please review cable types on the next page:



4. Turn the Rocpro 900 Hard Drive switch ON.
5. The Hard drive is preformatted for Plug-and-Play operation. After a few seconds a Rocstor HD icon will show on the "My Computer" folder under the Windows OS. Under the Mac OS, the Rocport HD will appear on the "Desktop."
6. Click (double click) on the Rocstor HD icon to access the drive.

INSTALLING YOUR DRIVE

All Rocstor hard drives are formatted as blank FAT32 (32-bit file allocation table) volumes {unless otherwise stated on the box} that are compatible with most modern Windows and Macintosh operating systems. To begin using your Rocstor drive, simply connect a data cable and power cord. There's no need to shut down your computer because your Rocstor drive is hot-pluggable. Just plug it in and it's ready to use.

The first choice you have to make is which of the provided data cables to use. The drive can connect directly to any available FireWire or USB port on your computer, or it can be Daisy-Chained to your computer through another compatible device with an available FireWire port. The ability to Daisy-Chain allows you to have multiple drives connected simultaneously, greatly increasing your available storage capacity. Daisy-Chain is only available through FireWire ports.

If you intend to use the drive for additional storage only—not as a startup device (bootable) use the cable that provides the maximum throughput rate for the buses available on your computer: Up to 800 Mbits/sec via FireWire 800, 480 Mbits/sec via USB 2.0, 400 Mbits/sec via FireWire 400, or 12 Mbits/sec via USB 1.1. To avoid damaging your hardware and losing data, never simultaneously connect the drive to the computer using more than one data cable.

Rocpro as a bootable device

If you intend to use the drive as a startup device, check the documentation that came with your computer to confirm compatibility with the various interfaces. PowerPC-based Macs require FireWire connections for startup disks, whereas Intel-based Macs can use either FireWire or USB connections.

Furthermore, using the drive as a startup device requires installing an authorized copy of the Windows or Mac operating system (available separately from Microsoft and Apple, respectively). To install the Mac OS 9 or OS X, you must reformat the drive as a Mac OS Extended volume with Disk Utility. An Intel-based Mac cannot start from a device formatted on a PowerPC-based Mac or vice versa.

Disconnecting Your Drive

Never disconnect or turn off an external drive when its activity light is ON. External drives must be properly unmounted (or disconnected) to avoid data loss and possible damage to the hard disk drive or computer.

PC

The easiest ways to safely unmount an external hard drive on your PC is to right-click the device removal icon next to the clock in the system tray. Then choose Safely Remove Hardware. Choose the external device you want to remove, and then click Stop. An alert will notify you if the drive is in use by an application. If in use close any open documents or applications on the drive and try again. Windows will display an alert when you can safely disconnect or turn off the drive.

Mac

The easiest way to safely unmount an external hard drive is to drag its Finder icon to the Trash. An alert will notify you if the drive is in use by an application. Close any open documents or applications on the drive and try again. When the drive's icon no longer appears on the Finder's Desktop and the drive's activity light is green, you can safely disconnect or turn off the drive.

Reformatting Your Drive

As mentioned previously, all Rocstor hard drives are formatted as blank FAT32 volumes (otherwise noted on the retail packaging) that are compatible with most modern Windows and Macintosh operating systems. However, you can use your normal disk management tools to erase or reformat the drive if needed. For example, Windows users may want to reformat the drive as an NTFS (new technology file system) volume, or Mac OS X users may wish to reformat the drive as a Mac OS Extended (Journal) or UFS (Unix file system) volume.

Please note that all of your data will be lost if the volume (Hard Drive) is formatted or reformatted.

Reformatting via PC (Window based computers)

Right-click the Rocpro drive in the "My Computer" folder, then choose Format. In the dialog window that appears, choose the desired capacity, file system and allocation unit size and then click Start.

Reformatting via Mac

Open Disk Utility (/Applications/Utilities). Select the drive in the list at the left, then click the Erase tab. Choose the desired volume format, specify a name, then click Erase.

Important Note

Any cable (FireWire800, or USB 2.0) inserted before the drive is powered on has priority over the other cables and will be the primary connection method, e.g. if the drive is connected via FireWire 800 before powering on the drive, data will be transferred via FireWire 800.

The drive should only be connected to a computer via one interface at a time. Connection of the drive to a computer via two or more interfaces is not recommended and may potentially damage your Rocpro drive and data.

How to Daisy-Chain through FireWire ports to your Rocpro Drive at one time

Daisy-Chain (Connecting Multiple Devices) means that device A is connected to device B and device B is connected to device C and so forth. All connections are made only through FireWire ports.

- Do not mix interfaces. Select FireWire ports only. For example, do not use USB and FireWire to Daisy-Chain.
- Mixing FireWire 400 and 800 connectors to Daisy-Chain will reduce the transfer speed to FireWire 400.
- Daisy-Chain allows you to connect multiple devices, such as cameras, external read/write drives and other external devices such as hard disk drive to your computer via FireWire ports.

PARTITIONING AND FORMATTING THE ROCPRO DRIVE ON A MAC OS

All Rocstor drives are factory formatted with FAT32, unless otherwise stated on the retail box.

WARNING: Formatting and Partitioning the Rocpro Drive will destroy all of its data. To protect your data, back it up before formatting or partitioning this device.

IMPORTANT NOTES:


1. All programs should be closed before beginning.
2. Connect the Rocstor hard disk drive to your computer using the appropriate cables.
3. Turn ON the Rocstor hard disk drive. Some Rocstor HDs are bus-powered and turn ON automatically. Look for a Blue or Green light.
4. "Click" means left click. "Right Click" will be so labeled.
5. Some computers are set so a single "click" will perform the task, such as opening a window. Depending on your mouse setting, you may have to double click to get to the next window. If a single click does not open the next window, please double click.

[illegible]

+C 2f uu22 1s 222f 2nlf a22atP22f 1s 222f y U| |2a2P2 2 Uf a(2

5C ?s??atP?g tee U?a ?n ??u?uf uf u?s???nrIf U? u?s?ay t??e?at slnt??m?s?ef ug tee
a?Ua?n?u?l?s?y ?lsf ?ef 1?f uu??tf uW??_??ta?? ta?? ????h?

?

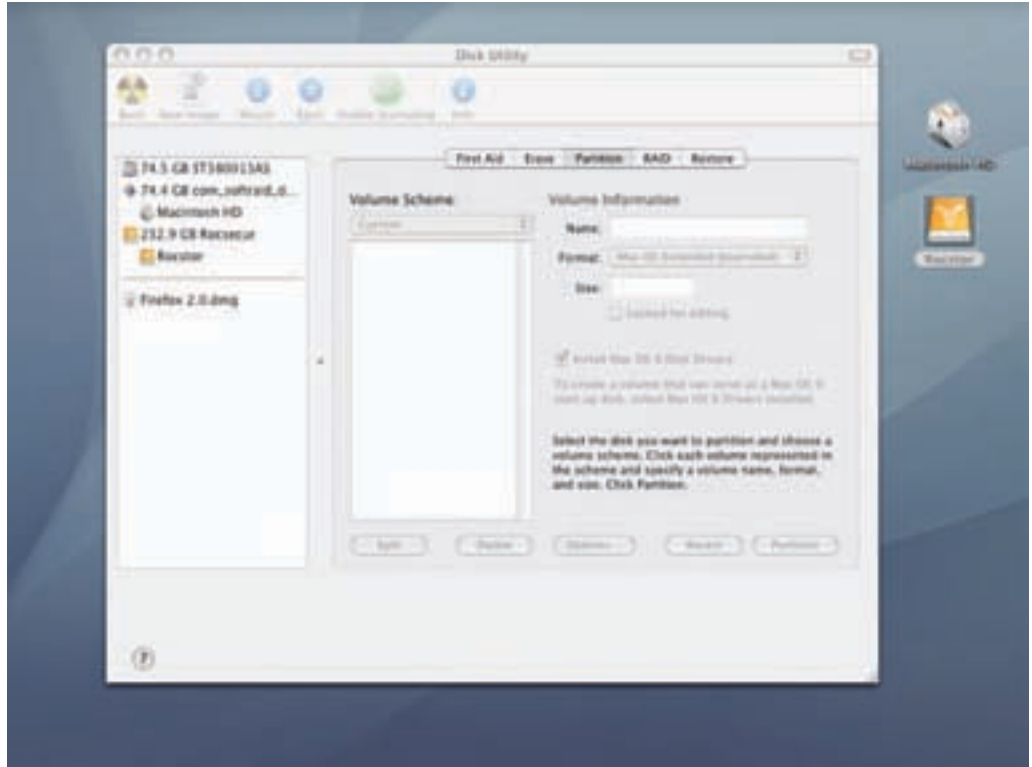

2 f | 2 G m s ? ? ? 2 a ? ? at P ? ? n ? f u u ? ? ? ? ? P t ? ? ? ? ? U f a l _ i s ? ? ? ? n r f U g f | e a u ? ? ? ? ? i s ? ? ? ? ? ? ? u i s ? ?
 d ? ? ? t u l f n s ? ? ? H a ? f u C ? s ? ? ? y ? ? U a f ? ? ? | a n g f | e ? ? n f U S d f i s ? ? ? e f g t u a n ? U n C ?

7C ? u?? ? ? ? ? ? u? U?? and u? ? ? ? ? ? If U?? ? ? u? ? ? ? ? ? tulf ns ? ? H? ? u?


[illegible]

?? ?364-E ?


kQuis?n? Ude? if unHy ?u | ?Par? f u?is ?d? | tel t? n? f u?



/Caui s 232 | tel t n Hy ?u | _?ed? f uis 232 tr ?? | tel SH-?f u?

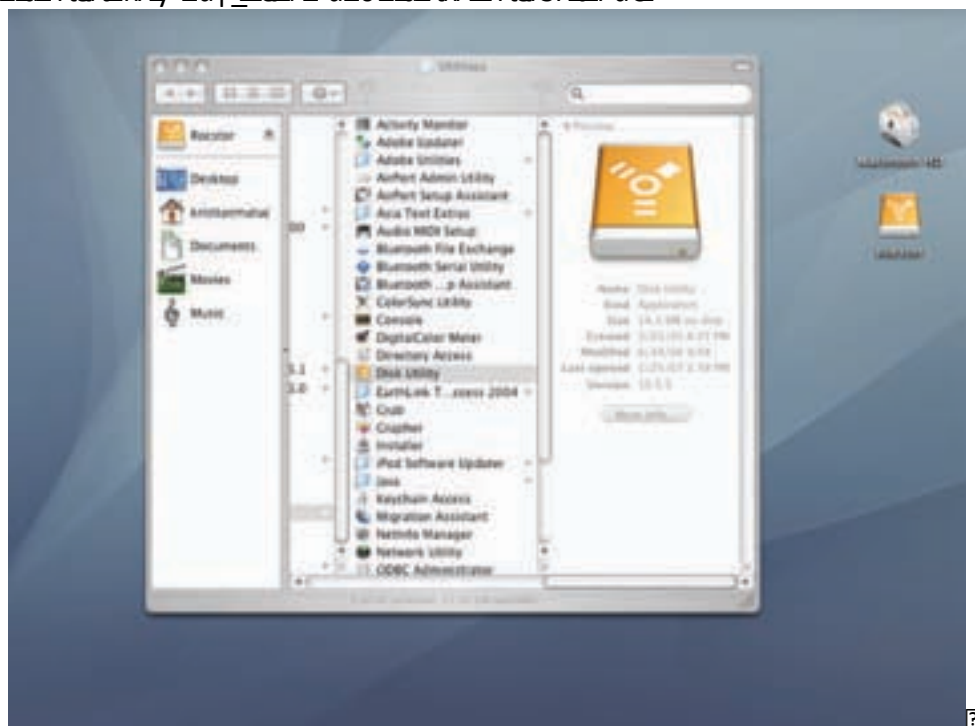


zC 2 uis 2 2 2 1 n 2 2 2 f 1 s 2 2 2 t r 7 7 | t e l S H y 2 u | i n 7 7 e n f 1 P 2 2 e a p a P 2 n 7 7 u 2 g t e 7 7 s 2 2
2 f o n l f a t a P 2 7 7 e r 7 7 f u s 2 2 2 f u s f g t u d s 2 2 7 7 t r 7 7 0 2 t l S C

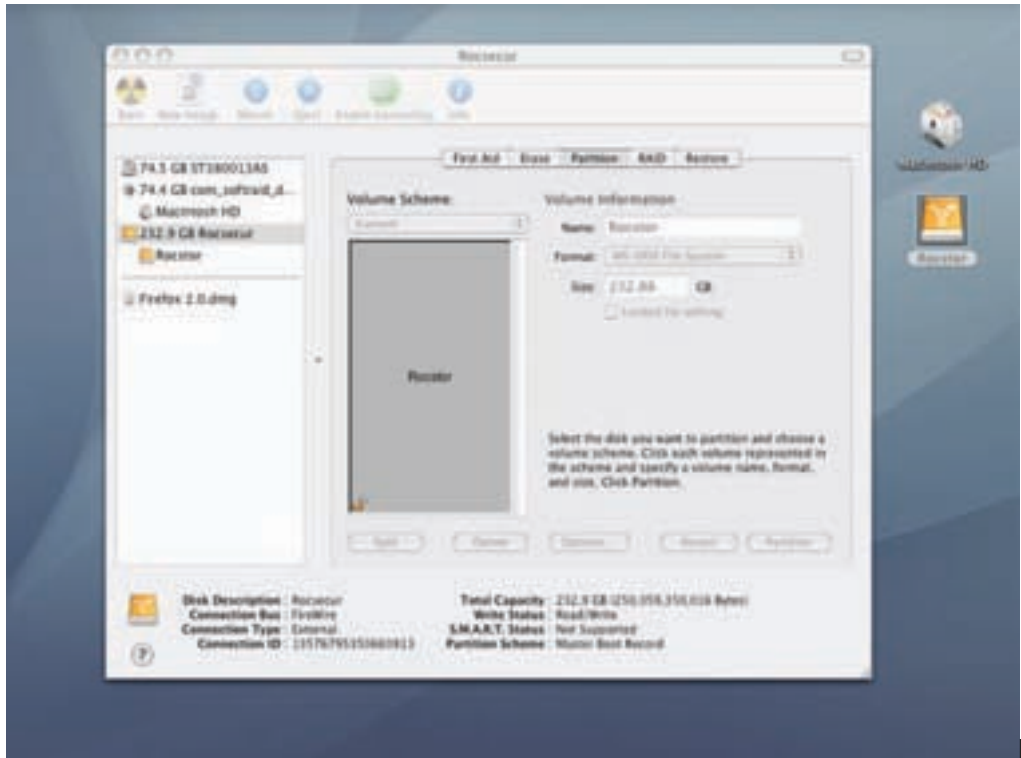

"C 2f | 2 2uf g uis222f nlf ay 2u | 2222f uis2222 ltf uH2 2 22is2u2222is22
d2 | a2ulH2 2 u222a22f d y 2222s 2y 22222af 222f g u2222 ltf uH2 2u | 22 222 222 22
"C 22is2222a22tf uH2 2u | 2f | 2 2 2222 22 2a | y 222f 222 ltf un2 2 2 222 22 a2
d2f d y 2222s 2y 222
+AC 22f | 2 22 ntu 22 22 2a2uf 22222f 2 +7222f g 2


++C 25f | 22 22 ntu 22t 2a 222r f u22 U2f u2f u2s 22f g 2a22ul 2a2f 12s 22g tu2f g 22222 2s 22
 22 12f u222s 22y 22f a2f | a2f 22f a22a2222 | 22n2f | 22222 22U2222 12f u22 2 H2s2u2
 222r 22 22

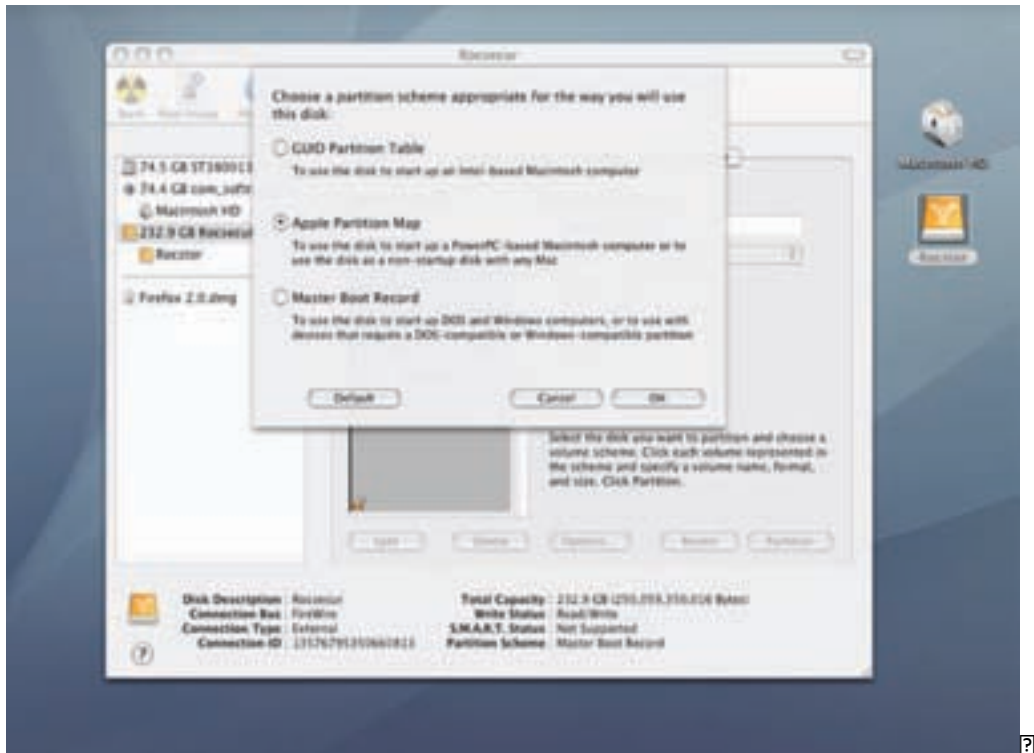

+5C 2f e2y 22u2f ay 22f u22222 22u2 22f a2f | a22a2222


22 22222 226222 22222 2HD62 5282 29s 222

22 2262-“ 2

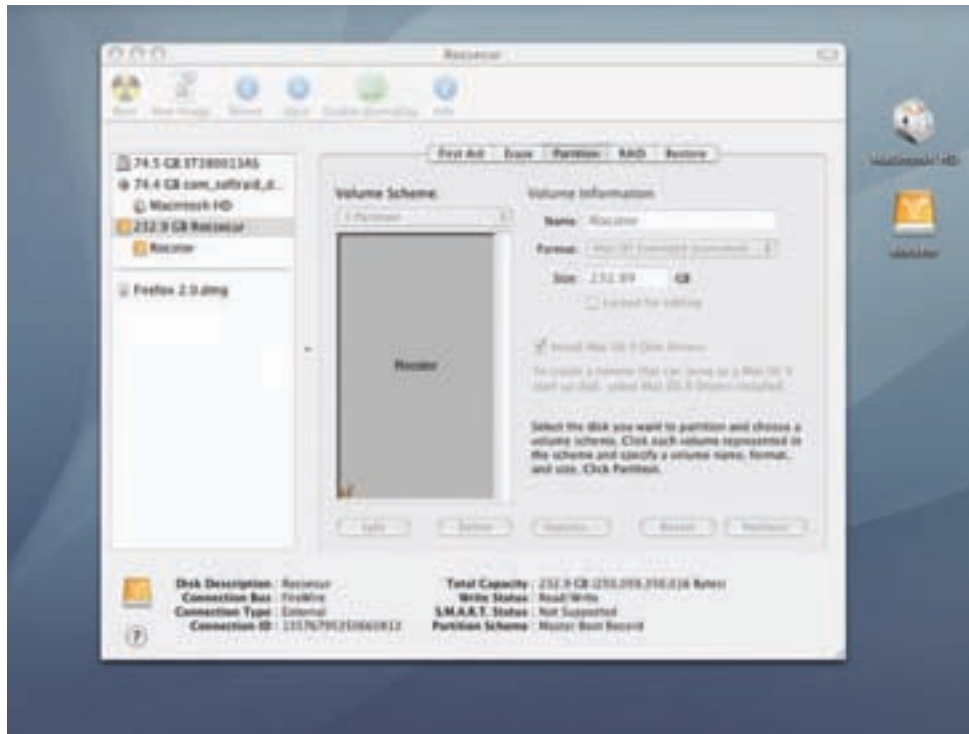


+7C If any of the partitions are not visible, you may need to use the Disk Utility application to partition the disk. To do this, click the 'Partition' button in the top right corner of the Disk Utility window. This will open the 'Partition Disk' dialog box, which allows you to create a new partition or modify an existing one. You can choose the size of the partition and the format to use. Once you have created the partition, you can format it using the 'Format' button. This will open the 'Format' dialog box, where you can choose the format to use. Once you have formatted the partition, you can use it to store data.

+EC The first step is to create a new partition. To do this, click the 'Partition' button in the top right corner of the Disk Utility window. This will open the 'Partition Disk' dialog box, which allows you to create a new partition or modify an existing one. You can choose the size of the partition and the format to use. Once you have created the partition, you can format it using the 'Format' button. This will open the 'Format' dialog box, where you can choose the format to use. Once you have formatted the partition, you can use it to store data.

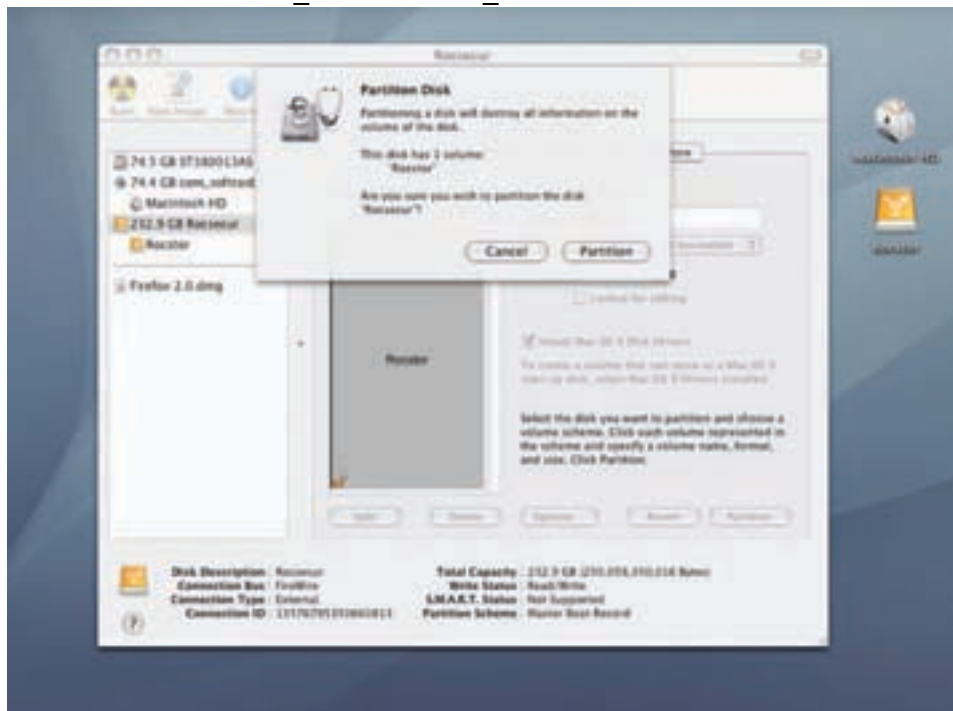

+kC The first step is to create a new partition. To do this, click the 'Partition' button in the top right corner of the Disk Utility window. This will open the 'Partition Disk' dialog box, which allows you to create a new partition or modify an existing one. You can choose the size of the partition and the format to use. Once you have created the partition, you can format it using the 'Format' button. This will open the 'Format' dialog box, where you can choose the format to use. Once you have formatted the partition, you can use it to store data.

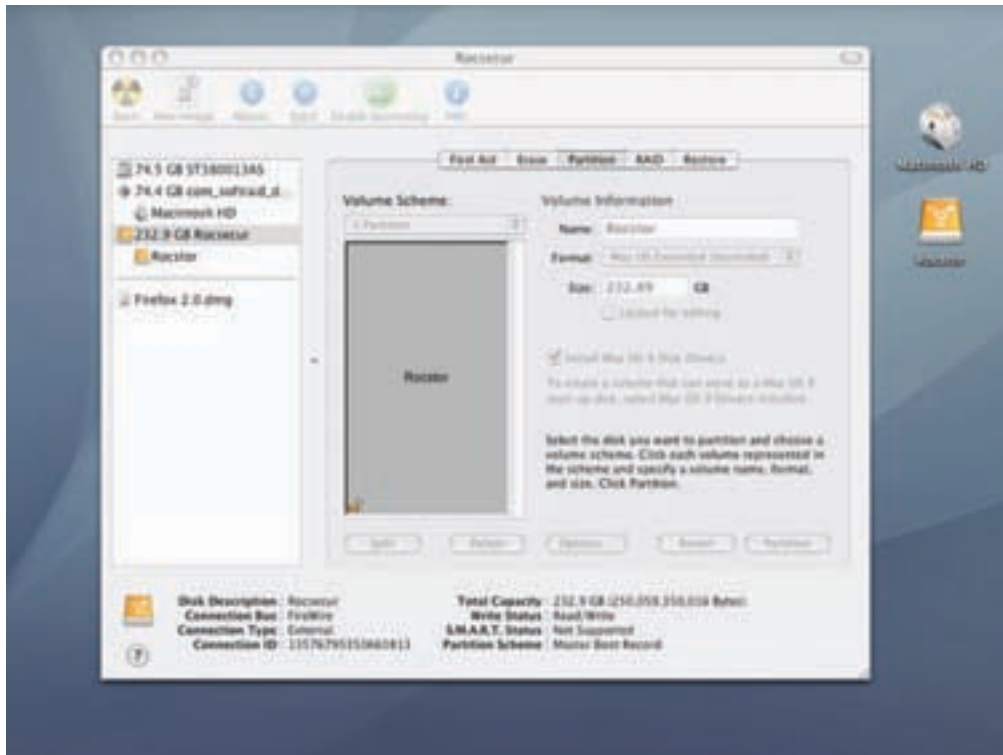

+ / C 2f | 22u2uf g 222t f 222f 222f 222f | au2f 2s 2222nr f U2

PARTITIONING AND FORMATTING THE ROCPRO DRIVE ON WINDOWS 2000, XP AND VISTA

All Rocstor drives are factory formatted with FAT32, unless otherwise stated on the retail box.

WARNING: Formatting and Partitioning the Rocpro Drive will destroy all of its data. To protect your data, back it up before formatting or partitioning this device.


IMPORTANT NOTES:

1. All programs should be closed before beginning.
2. Connect the Rocstor hard disk drive to your computer using the appropriate cables.
3. Turn ON the Rocstor hard disk drive.
4. The initial goal is to reach the Control Panel. If you know how to get there, skip this section and go directly to Instruction 1 (Instructions for Partitioning and Formatting from FAT 32 to NTFS.) A fast way of reaching "Disk Management" is to right click "My Computer" icon and click on "Manage" in the drop down menu. The next window is "Computer Management." In the left menu, click "Disk Management."
5. The ultimate goal is to reach Disk Management. If you know how to get there, skip this section and go directly to Instruction 4 (Instructions for Partitioning and Formatting from FAT 32 to NTFS).
6. Due to different views that are possible on Windows operating systems (2000, XP, Vista), we will provide various ways of reaching the Control Panel.
7. "Click" means left click. "Right Click" will be so labeled.
8. Some computers are set so a single "click" will perform the task, such as opening a window. Depending on your mouse setting, you may have to double click to get to the next window. If a single click does not open the next window, please double click.

DIFFERENT WAYS TO GET TO THE CONTROL PANEL:

(You may use any one of the following methods)

1. If the icon “My Computer” shows on your desktop, click or double click on the icon. Under “Other Places” click on “Control Panel.”

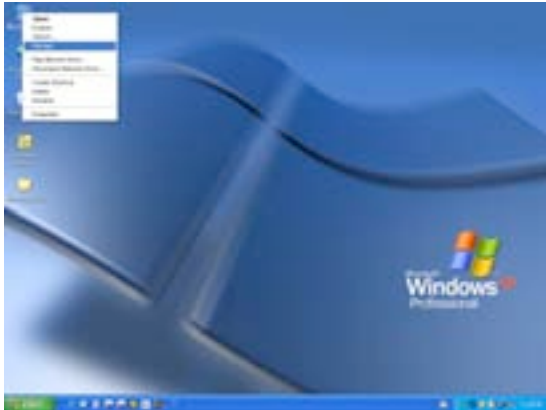


Under Windows XP




under Vista OS

2. If the icon “My Computer” does not show on your desktop, click on the Start icon on the lower left of your screen. If the Control Panel link is displayed, click on the Control Panel link.

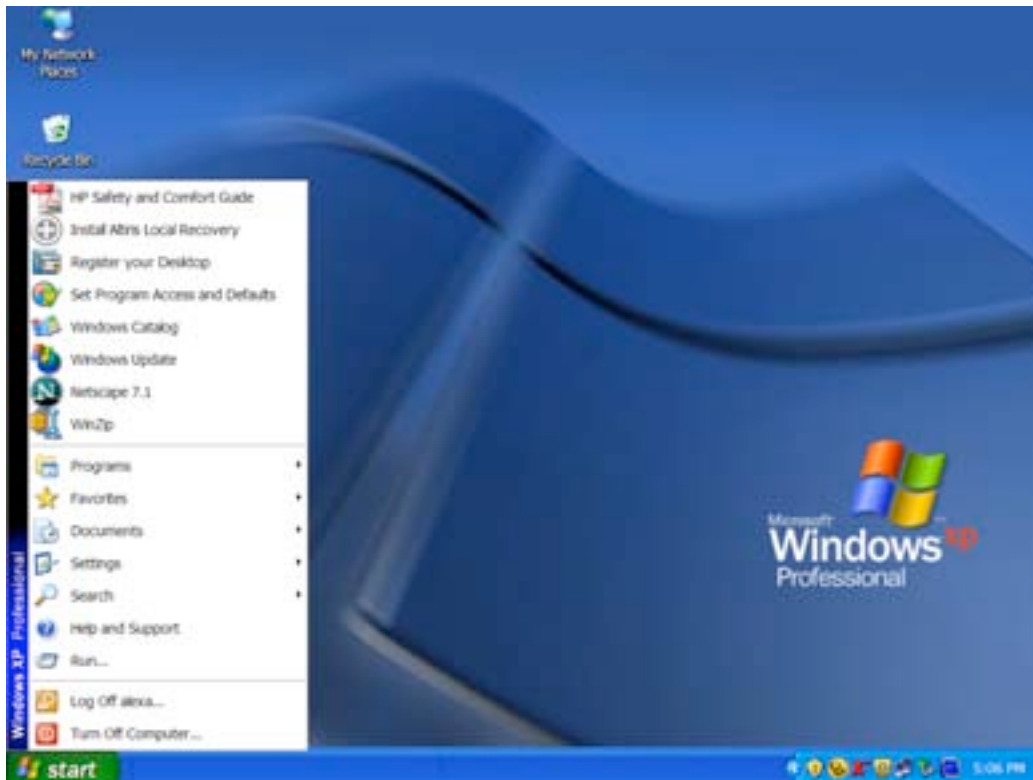


3. If the icon “My Computer” does not show on your desktop, click on the Start icon on the lower left of your screen. If the Control Panel link **is not** displayed, click on the Settings link and then click on the Control Panel link.
4. Click on the Start icon on the lower left of your screen. Click on Run. Delete anything listed in the Open window. Type the following: compmgmt.msc and then click OK. Skip to INSTRUCTION # 4 (Instructions for Partitioning and Formatting from FAT 32 to NTFS {page 24}).

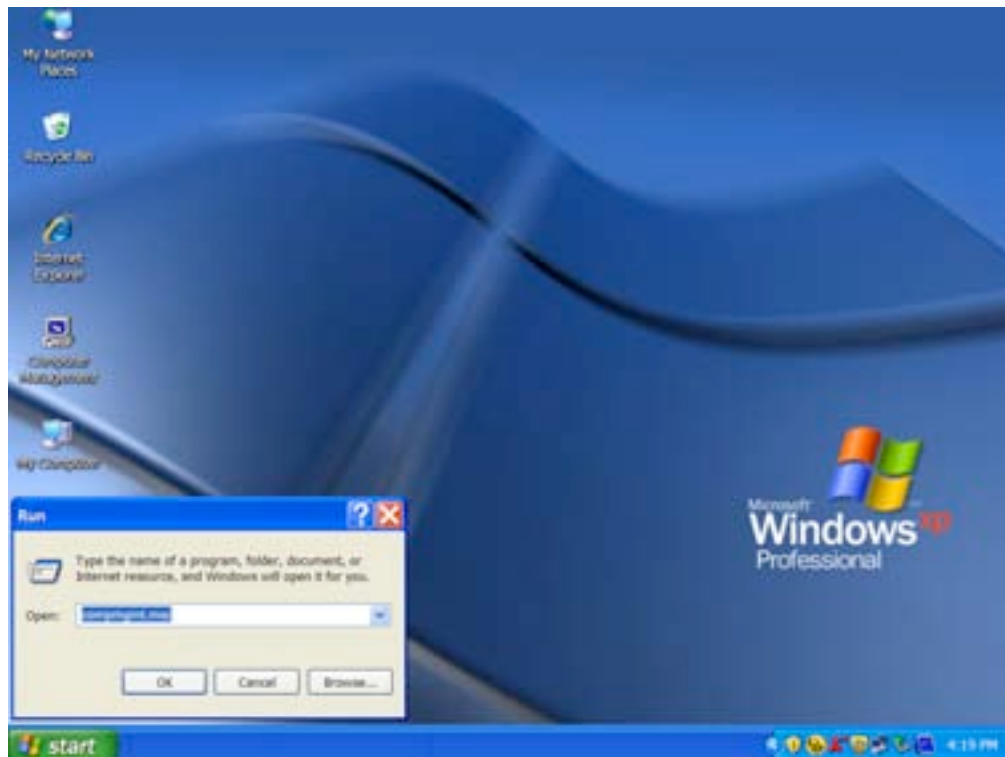


INSTRUCTIONS UPON REACHING CONTROL PANEL

- a. After reaching the Control Panel, click on Administrative Tools.

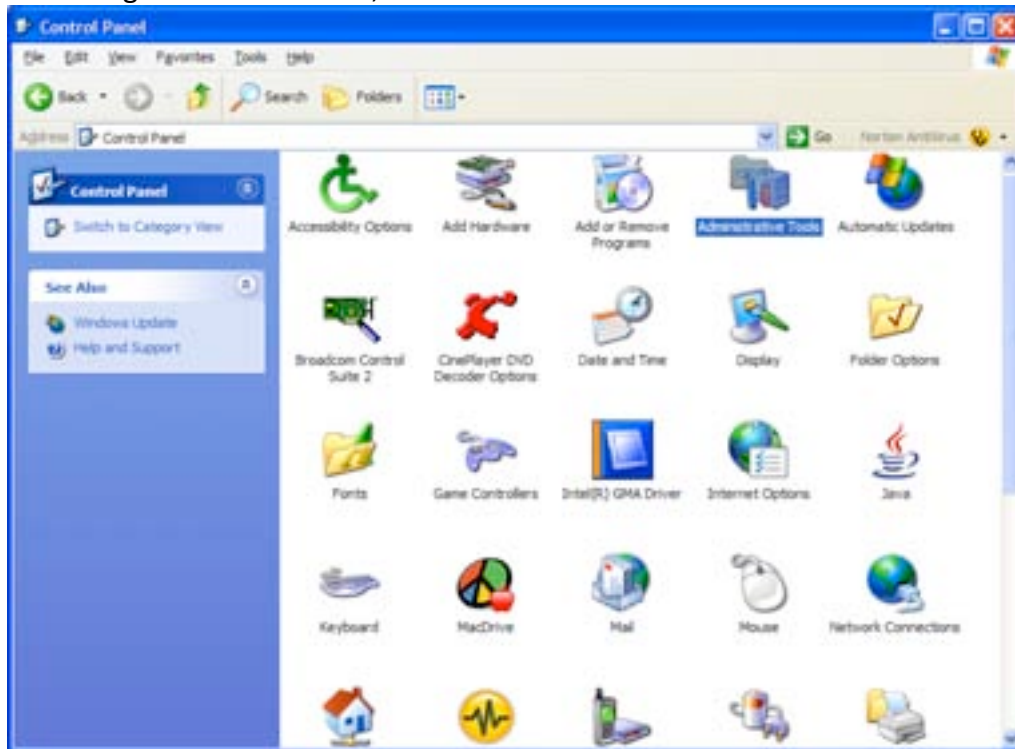


- b. After reaching Administrative Tools, click on Computer Management.
- c. After reaching Computer Management, click on Disk Management.

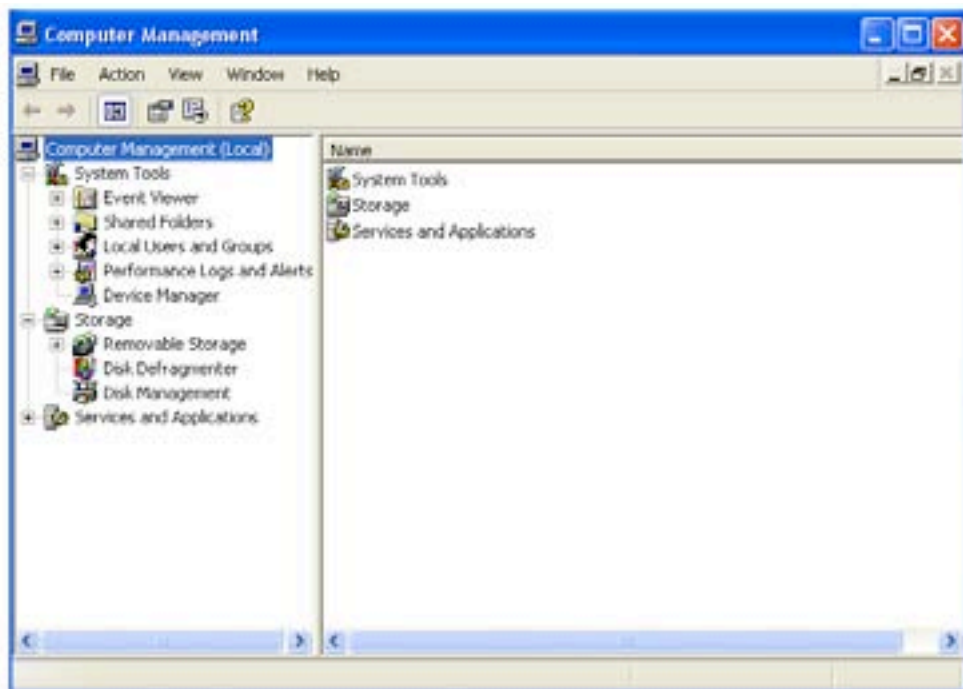


INSTRUCTIONS FOR PARTITIONING AND FORMATING FROM FAT32 to NTFS

1. In the “Disk Management” window, right click the Rocstor drive in the upper portion of the menu to highlight it. In the drop down menu, select “Delete Partition.”

WARNING: Formatting and Partitioning the Rocpro Drive will destroy all of its data. To protect your data, back it up before formatting or partitioning this device.

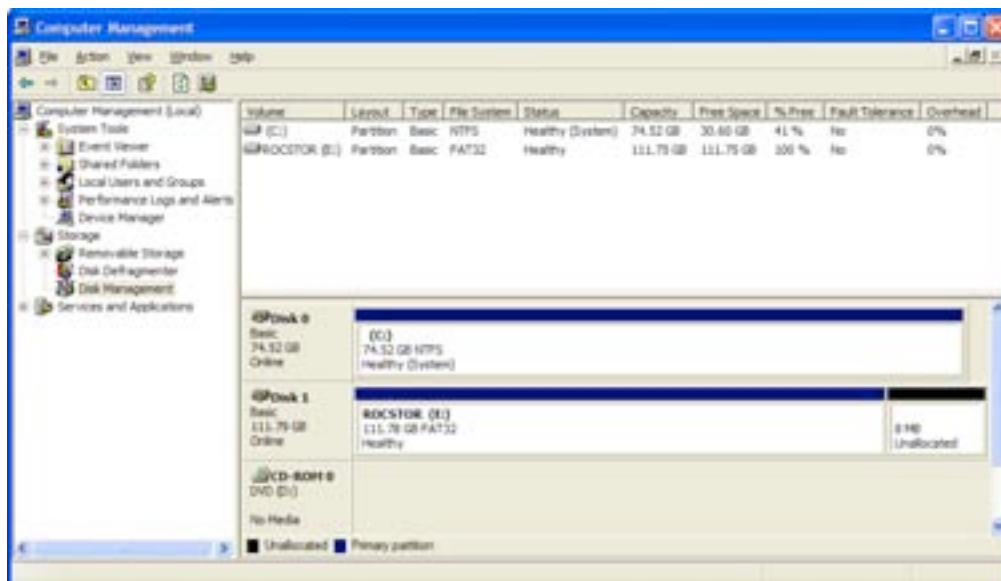


2. The next window is “Delete primary partition.” Click on Yes.

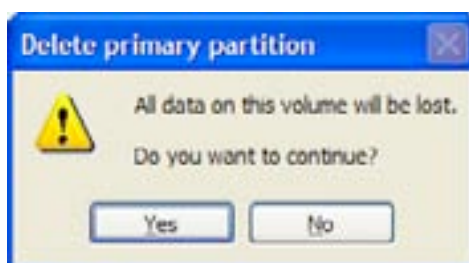


3. At this point the Rocstor drive will not show up on the “Disk Management Volume” window in the upper menu.


4. The Rocstor drive will show up in the lower menu as an “Unallocated” disk.

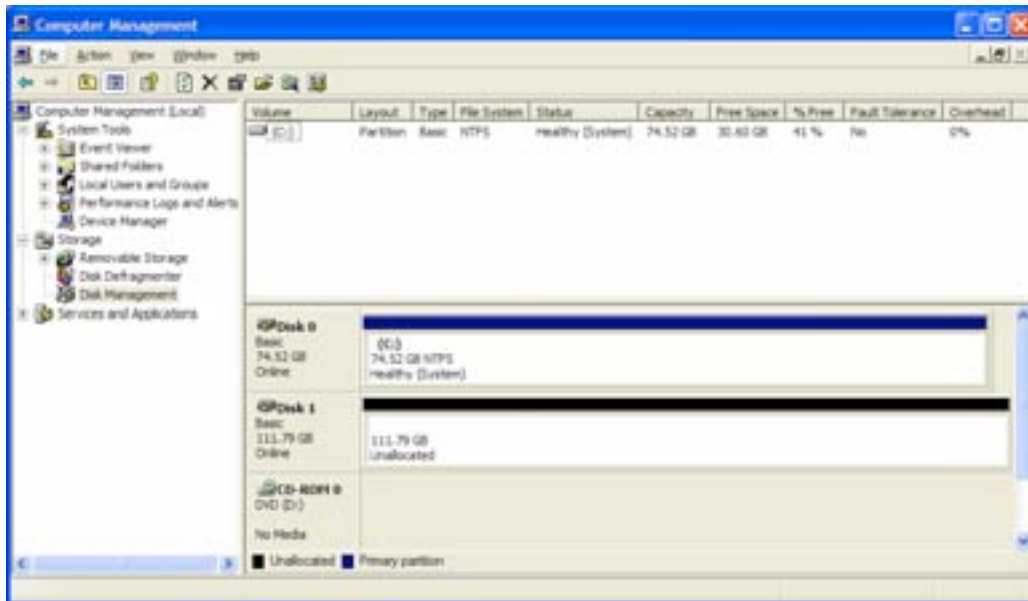


5. Right click anywhere in the “Unallocated” disk area in the lower menu.
6. Click on “New Partition.”
7. You are taken to “Welcome to the New Partition Wizard.” Click “Next”.

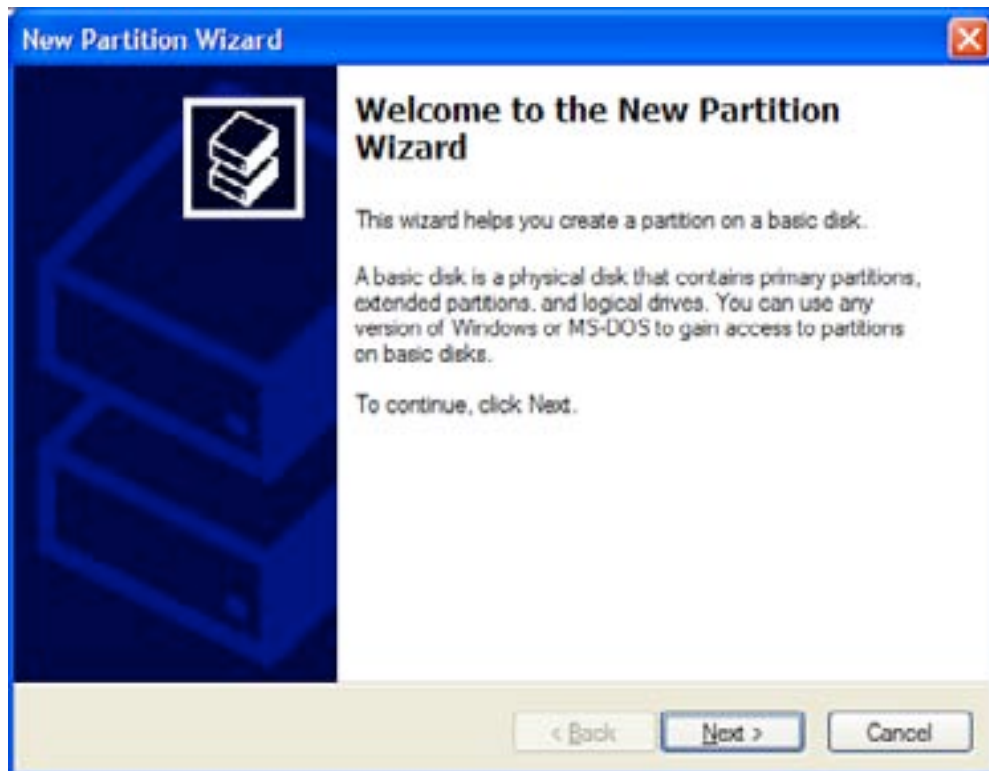


8. Click on “Primary partition” (it should be selected as the default partition). Click “Next”.

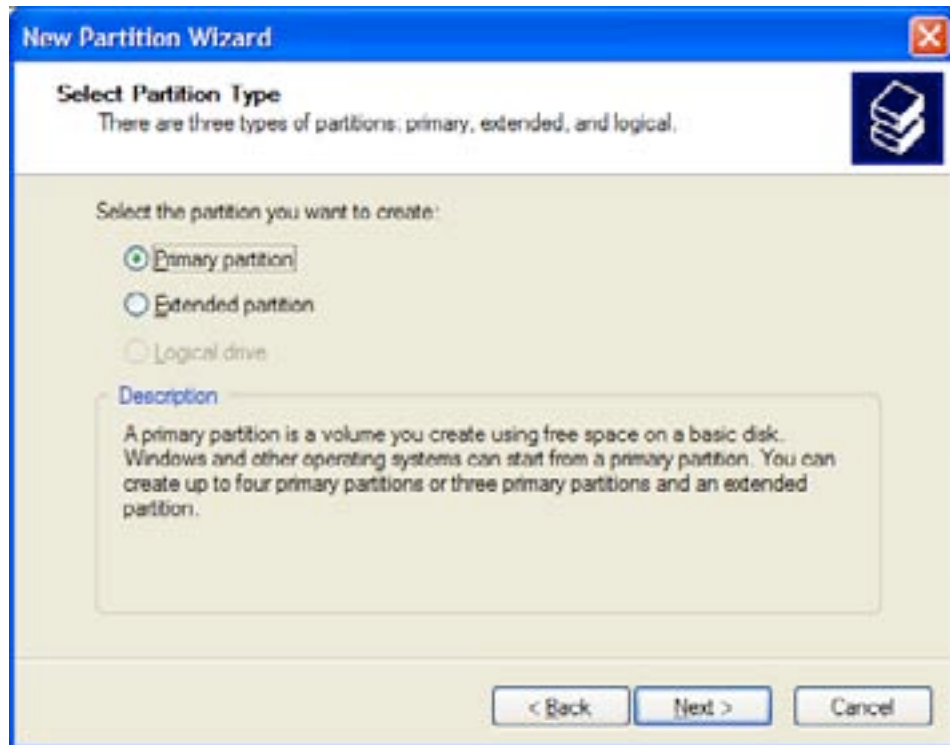


9. Under “Specific Partition Size,” click Next to accept the default setting, which is the maximum size allowed.

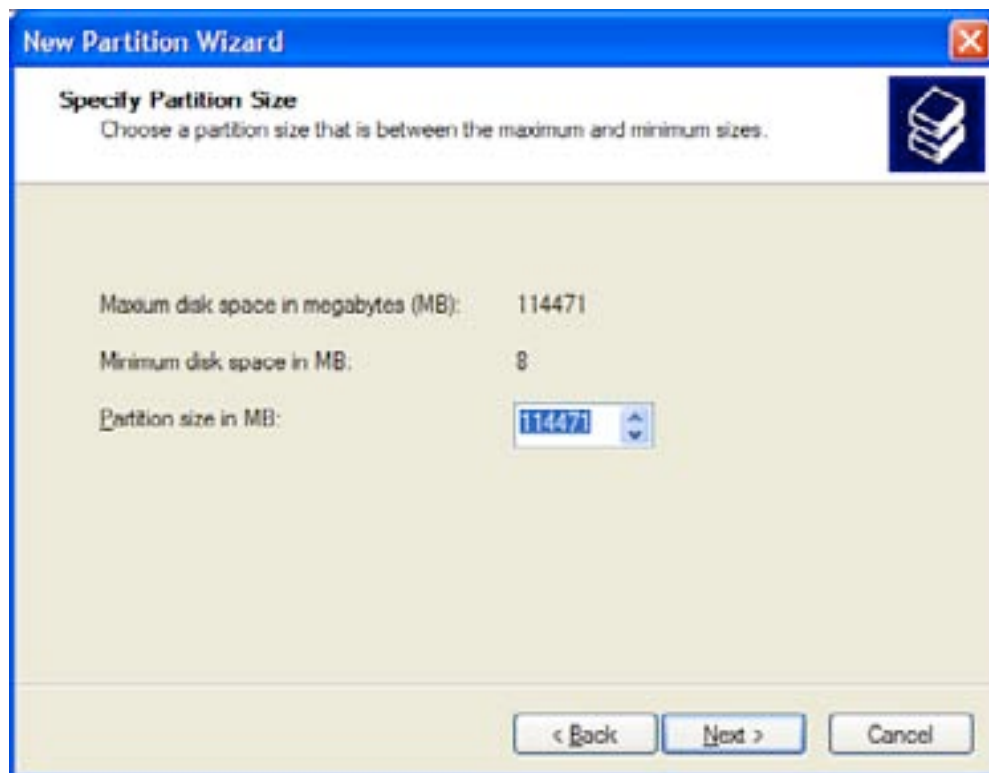

10. Under “Assign Drive Letter or Path,” accept the default letter and click “Next”.

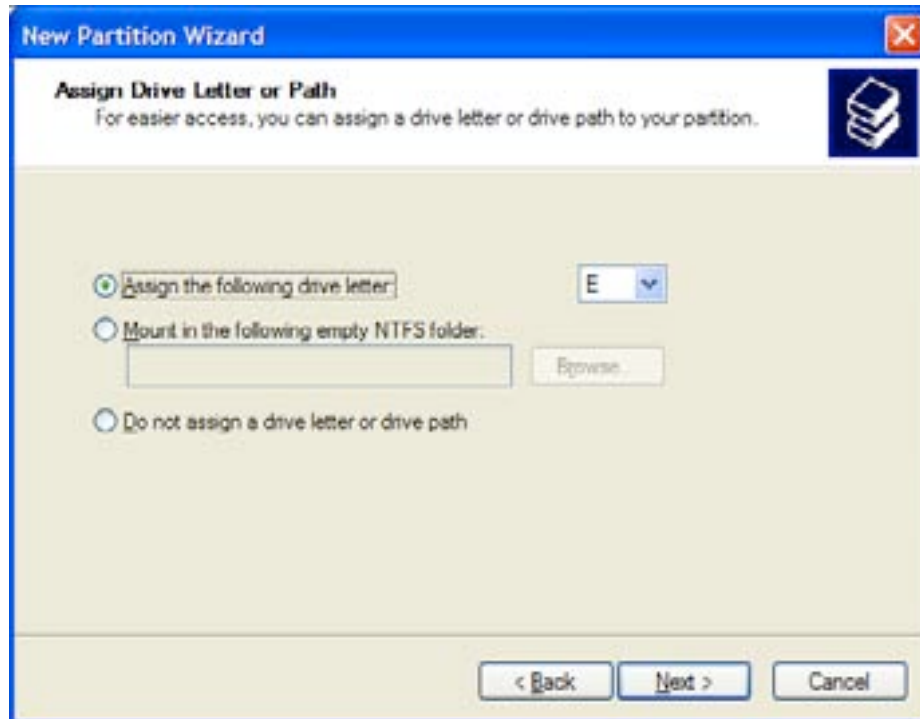



11. In the “Format Partition,” accept the default setting.

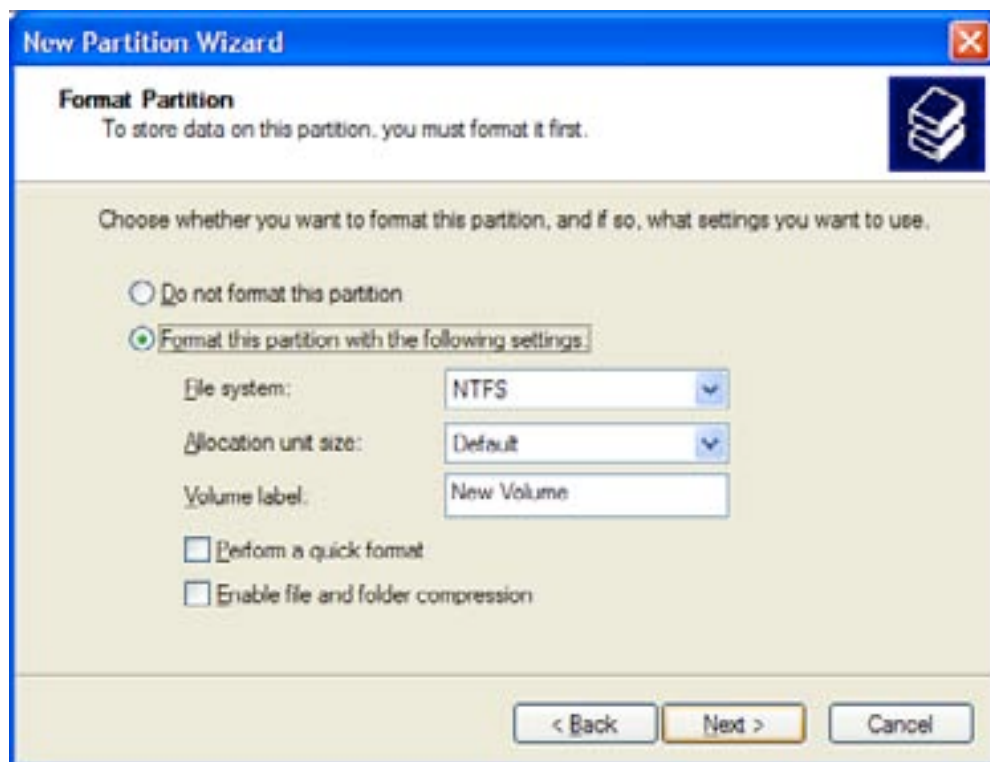

12. The “Volume label” can be changed to any name up to 11 characters.


13. Suggest that “Quick Format” be selected and then click “Next”.

14. You now reached the “Completing the New Partition Wizard” screen. It displays the various settings you previously selected. If you are satisfied with your selections, click “Finish” to complete the new formatting. At this time the Rocstor disk drive is being formatted, which may take a few minutes.

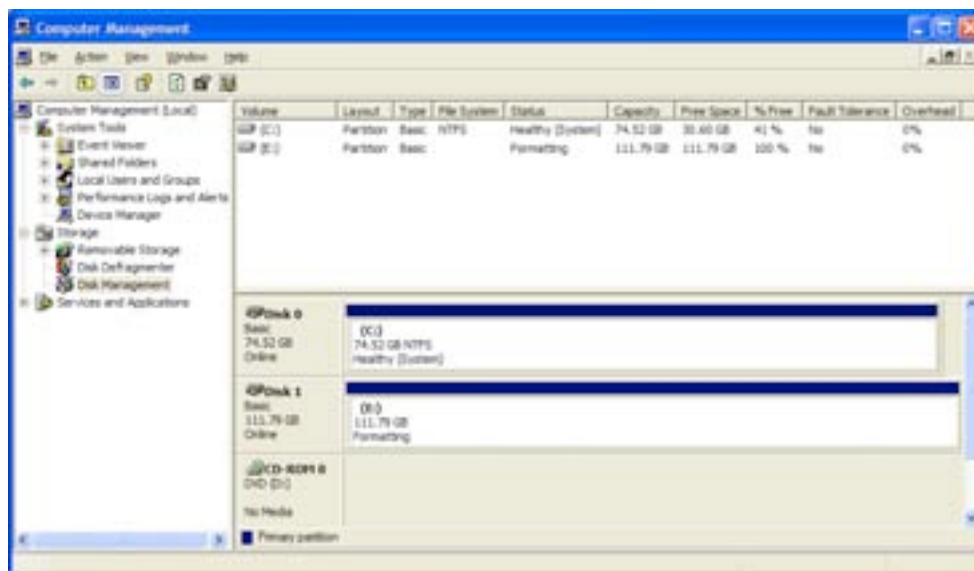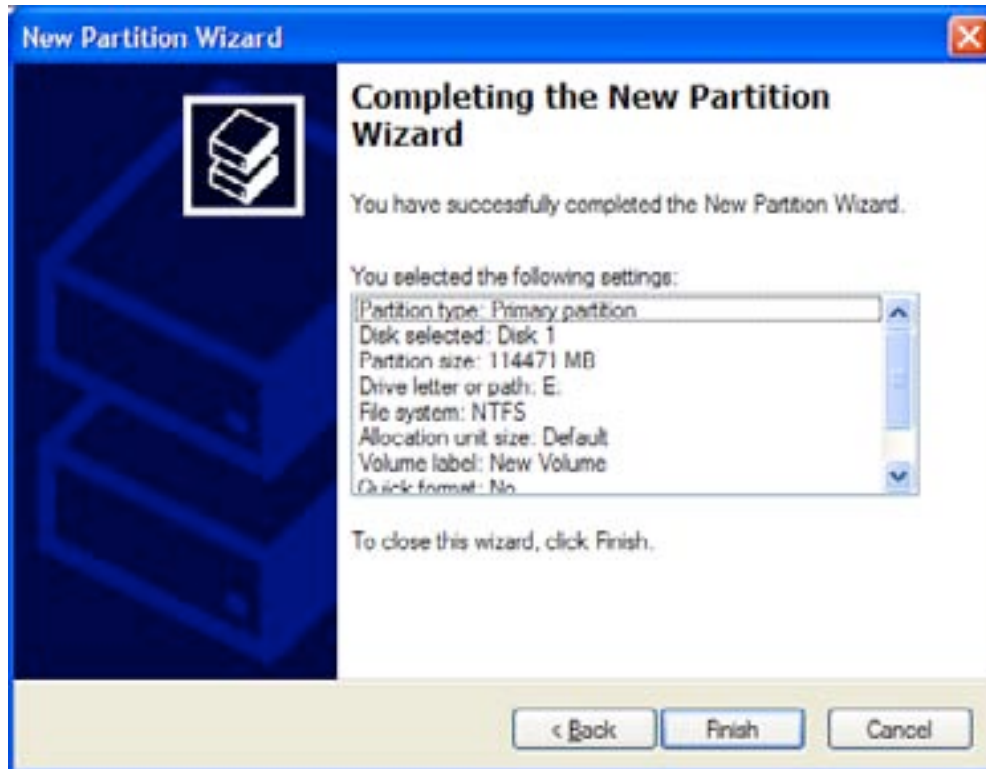

15. You will return automatically to the “Disk Management” window and will see the newly formatted Rocstor disk on the screen with the name you selected. If no new name was

entered in the “Volume label,” the Rocstor drive will show up as “New Volume.” To rename the volume at this time, right click “New Volume” and click “Properties.” You can now change the volume name up to 11 characters. Click OK.

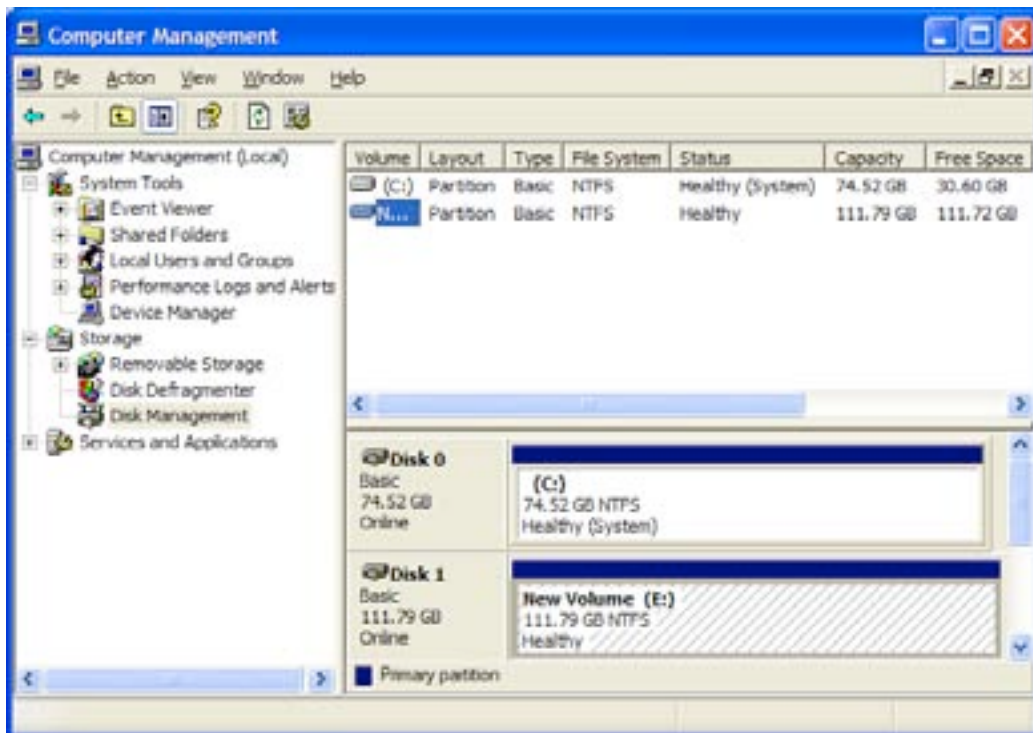

16. You can also change the name at any time in the future by reaching the “Properties” menu of the Rocstor drive.
17. You can now Exit or close to return to the desktop.

Troubleshooting

Rocstor data storage products are subjected to several quality control tests before leaving our factory. However, from time to time, the product may not work after shipment or would experience intermittent problems under certain criteria and/or situations. Should you experience a problem with your Rocpro HD, please review the Manual and read the possible solutions that fit your problem. (The User Manual is updated regularly so check the Rocstor website for an updated Manual). Please contact Rocstor technical support listed under contact information at the end of this Manual.

Troubleshooting for MACINTOSH computers

Problem: The computer does not recognize the drive

Solutions:

- Is the Rocpro green light ON and is the cable connected from the HD device to the computer. Rocpro HD icon should appear on the desktop. Continue to review this guide to find the solution.
- Your computer's Minimum requirements may not meet the minimum system requirements as indicated in this Manual. Page 7
- Confirm that the outlet is providing the correct voltage and the electrical power cord is securely attached to both the outlet and the Rocpro drive. Poor or loose connections can result in loss of power and possible damage to the drive. Ensure that the ON/OFF switch is turned to the ON position.
- If the Rocpro drive is connected to an outlet via an Undisrupted Power Supply (battery Backup) or a surge protector, be sure that they provide the correct voltage and they are all switched "ON" and receiving electricity.
- Please review this Manual's installation procedure for the operating system and interface you are using.
- Read the Manual's installation procedure to ensure it was properly followed.
- Please check the cable connections as the cables must be properly and securely attached to the computer and hard drive. Ensure that there is a firm connection. It is suggested that the cables be detached and reattached, and that the computer be shut off for 20 seconds and then restarted.
- Ensure that the Rocpro drive has been properly reformatted by reviewing the User Manual.

- Have you checked to confirm that the computer's operating system works with the file system?
- Review the manual that came with your computer to ensure that the file system is compatible with the operating system.

Problem: The Rocpro drive is not working fast enough.

Solution:

- You may have too many devices connected to your computer (such as Laptop computers.) Disconnect some devices and observe if there is an improvement in performance.

Problem: There is a decrease in performance when the Rocpro drive is connected via the USB cable to a USB 2.0 port.

Solution:

- Ensure that the USB 2.0 drivers for the host bus and device have been properly and securely installed. You may reinstall to assure proper installation.

Notes:

- When connecting the device to USB 2.0 port in your computer, please be sure that the connection at the host computer is High Speed USB 2.0 and drivers (if required) are installed; otherwise you may experience slower transfer speed between the host computer and the Rocpro device.

Notes - Mac OS 10x:

- Rocpro drives are designed to save electricity and subsequently the wear and tear of the internal hard drive by having the hard drive stop spinning when the Rocpro is not accessed for a certain amount of time (sleeping mode). Under Mac OS 10 you it might cause an error please ignore the error message as it might take few seconds to start spinning at the designated speed (wake up.)
- You may require upgrading to a higher version of Mac OS if your host computer does not recognize the Rocpro device when connected via FireWire.
- You must avoid particular characters similar to ^!?\< when coping to FAT 32 volume section.

Troubleshooting for PC WINDOWS based computers

Problem: The computer does not appear to recognize the drive.

Solutions:

- A window should appear, notifying you that a device is connected and/or the Rocpro HD icon should appear on the “My Computer” folder.
- Your computer’s Minimum requirements may not meet the minimum system requirements as indicated in this Manual. Page 7
- Confirm that the outlet is providing the correct voltage and the electrical power cord is securely attached to both the outlet and the Rocpro drive. Poor or loose connections can result in loss of power and possible damage to the drive. Ensure that the ON/OFF switch is turned to the ON position.
- If the Rocpro drive is connected to an outlet via an Undisrupted Power Supply (battery Backup) or a surge protector, be sure that they provide the correct voltage and they are all switched “ON” and receiving electricity.
- Please review the Manual’s installation procedure in reference to Formatting, Operating Systems and Interfaces you are using to ensure they were properly followed.
- Please check the cable connections as the cables must be properly and securely attached to the computer and hard drive. Ensure that there is a firm connection. It is suggested that the cables be detached and reattached, and that the computer be shut off for 20 seconds and then restarted.
- If a conflict with drivers or extensions exists, contact Rocstor for assistance; email tech support at support@rocstor.com or call technical support department at 888.877.7716.

Problem: The FireWire ports would not mount (work) with Windows 2000

Solution:

- You may require installing Windows 2000 Service pack 4. You may download the Service Pack 4 update for free from the Microsoft website.
<http://www.microsoft.com/Downloads/details.aspx?familyid=1001AAF1-749F-49F4-8010-297BD6CA33A0&displaylang=en>

Problem: The Rocpro drive is not working fast enough

Solution:

- You may have too many devices connected to your computer (in particular in case of Laptops.) Disconnect some devices and observe if there is an improvement in performance.

Problem: The performance and/or transfer speeds are slow when the Rocpro drive is connected to my USB port.

Solution:

- USB ports come in different speeds from 12Mbps/ s to 480Mbps/s. USB 2.0 is a High-Speed connection. If the Rocpro HD is connected to a USB 1.1 port (low speed) or hub, the drive will work slower than if connected to a USB 2.0 port or hub.

Problem: There is no increase in performance when the Rocpro drive is connected via the USB cable to a USB 2.0 port.

Solution:

- Ensure that the USB 2.0 drivers for the host bus and device have been properly and securely installed. You may reinstall to assure proper installation.

Problem: The drive is working slow when connected directly to a USB 2.0 port on your computer

Solution:

- Review the minimum system requirements for your computer to ensure it supports High Speed USB 2.0.

General Notes:

- When connecting the device to USB 2.0 port in your computer please be sure that the connection at the host computer is High Speed USB 2.0 and drivers (if required) are installed, otherwise you may experience slower transfer speed between the host computer and the Rocpro device.

Front Lights:

Problem: The front Light does not come ON.

Solutions:

- The Rocpro device may not be connected to electricity.
- The device switch is in the OFF position.
- The Built-in Power Supply does not work. Contact Rocstor technical support.


Situation: The light is green but it also flickers in Red.

Solutions:

- The Light is OFF when the drive is Reading/Writing; do not turn the device OFF in this situation as you may lose the data being transferred in R/W.
- The light remains Green at normal operation or idle operation.

Specifications

- **Dimensions:** 5.8 x 8.7 x 1.6 inches
14.7 x 22.0 x 4.1 cm
- **Weight:** 2.9 pounds (1.3 kilograms)
- **Transfer rates:** FireWire up to 800 MB/s; USB 3 up to 5 Gbits/s; or USB 2.0 up to 480 Mbits/s.

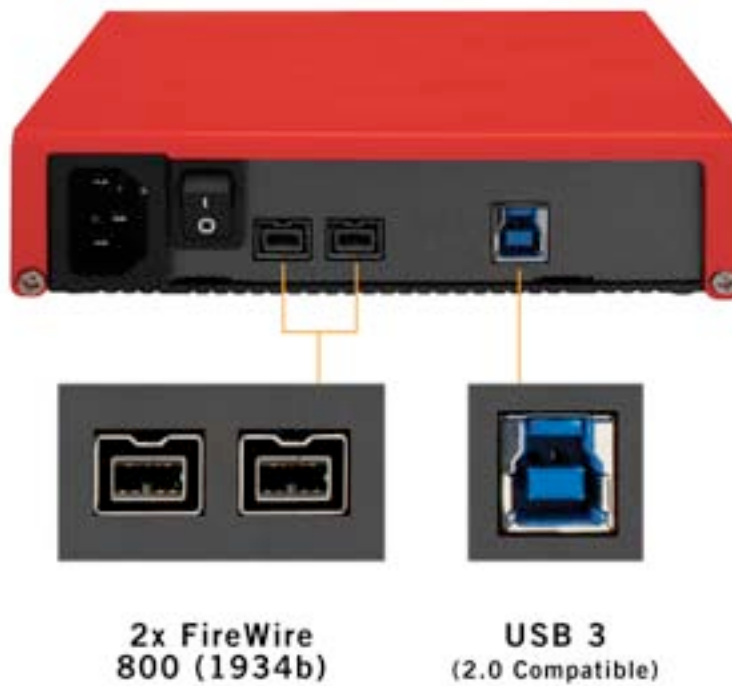

08025 095479 u822251\$08.6177927722577

022 02177 U027u2Gm7a2u2u7 22f a1s277777QK3Y2
tul2a12 2301sf | s1s22-7" E010 2a 22 nf 771tu2n77
222r U02 21ul2a12 2h777a22 ta21n2 nf 2uf g u2n 0022 22
w2f uSm2u2y 2h77 2772302 2 f ut2m2u2y 2uf l1f 7722
2f u1| n2222 ts27777 2f a22a10 2n27777772a2 77| n2
tul2a12 2310 2a 22f a2t s2nU22277f y | ut22 tf un2 22
trf 2s af uf | n222 xty 2772 2 la2un2a2a2M2ul 22 n222u77
U2anf u2 77f y U| l2a2 277t t2 27 2f 27t t2 2722f 07



2u2922825779222850952

0222 022Y662N2222QK3Y12/x2tu77f uu22f a77u21a2 n2a272 2 222g 22u2
222P22n22 2-AA25AA2f a2EAA77 2tln232 1x2 | U022222 a2 2n2ws 277 | 2 2
la2un2a2222n2 22 "7AE 2"/7A" 22 22" 7G+ / 77 2tln2n202-5G"" 2
5E0kz/ 22 22 "G-k52y 2 2 Sl2n2U2a277f u222nU222 t22Sh22s 2n277t12a2ul2
la2un2a2y f 22n22 277f y y f u22221a2222f 22 77-AA275AA27u277EAA2



22 222u ls2n2y t2222f 2-EC272V2K2y 2l2an221sf | s2 U1f 2/ 772 2n272 777722nS2s2tu222
| ntu 77 l2P222U22 2an2222aue 2 | 2n2f a2ul2aue 2 | 2n2f 12u2Ua2n2ul2u77a22 ta277M2tuy 2ul2
2s277EAA2n2 2a 222y tln2 S77f u1t | a2 tf uW2y 22ty | y 772 222u ls2lf 27A222252y 2l2an277s22
/x2tu77f uu22f a2n2f y y f u22f | u22f u22n2r1f U27f y U| l2an2 2772 2n | U222s277f uu22 222
222P2222 ts2Uf g 2a277

2s22/x2tu2uf g 2a22277f uu22f a27 2n2uf g 2a2f | U| l1f 2n | U2f a2722aue 772P22n277SUT22 277 222P222
22u2U2 277 f | l22f 2722 2 l2n2af y l2s22Uf a277f g 2P2a2s222f 22 222a t2n2t ut122 l22af y 2
2t12a2ul2772P22n277f 22 22n2U222t12222 2ua2 | 2 2222 22s2f | 22uf y t22 277277f | l2k2P2 2n2
w2 22E2f 27A277U22W2y U2y 2ul2 tf u2f u22 If Un2n2SUT22 2222 222f 772 l2a2Uf g 2a2 22
22u77222 2f g 22 2777 | l2y f a222r22277 f | l2-5772

0222 022Y662N2222QK3Y212

+7" E22 nf 2n2 222a2tN222s222Utu77f uu22f a27 a22 S2g t22222u2 n277s222x
Utu2P2antf u2n2 n222f u2y 2u277f un| y 2a2772P22n2n | 2s2 772 2f a22an27f y 22
2Uf Un2 22 l2s2a2y 2 22a22 ta2772P22n277s2f | s2 | 2772 22f y U2 t222
g ts2/x2tu2ul2a12 2n2222 r2uf g 2a277f uu22f a2n277



000 000H66N0000Q3Y010 xUtu00ta00 ta00' AAI 75AA00000-7" E0h0f uu00f a00
 g 0n0ulaf 0|00000f y y 0a000 S00S00 U000005AA700s tr00g 0a0-7" E0
 nU000000 tf u0w-7" E0h0u000f a00nUf u0tu 0Uaf 0|0n00 0f g 00l00 n0a00 0f 0
 z"/0E7500 0t0n0000|00| U020P000 u0g 00u0f 0tu 00s 0y 000ay 0000|0
 y f00000000 rg0 0n00f y U0 t000f0s000f g 0a00 0n00 00 xUtu00f uu00f a00
 f 00ta00 ta00EAA00f g 0P0a0g st00s 000000-7" E000 000000-7" E0000000000
 0 000f y U0 t0000s000ta00 ta00' AAW00f uu00f a00n0t00a0ul0af y 00ta00 ta00EAAW0
 0f uu00f a0y 0 tu 0s00g f000 0n0u0f y U0 t0000u00 0U0a0f a0000 l0a00 00
 U|a0s0 0000af y 00 00 0000af ut00n0f a000 0f g n0s000f uu00f tf u0f 0f 00a0
 00P000n0f 0s000g 0a0Uf a00



0s00|000000-7" E000U000000 tf u0h| U0f a0n00 0 a0 0n0 U0f 075AA00 0t0n0000 P0a000|0xy f000
 f U0t00 00f uu00f tf un0 U0f 075AA00 0w-AA0 0l0an0000u l0s0



USB Mini "B"

USB



-



Comparison Chart:

	Raw Bandwidth	Transfer Speed		Power Provided	Device per channel
	(Mbits/s)	(Mbits/s)	Max. Cable Length Feet (meters)		
SAS	3000	375	26 Ft (8 m)	No	4
eSATA	3000	375	6.5 Ft (2 m)	No	1 (15 W/ port multiplier)
SATA 300	3000	375	3.3 Ft (1 m)	No	1 per line
SATA 150	1500	187.5	3.3 Ft (1 m)	No	1 per line
PATA (133)	1064	133	18 inches (0.46 meters)	No	2
FireWire 3200	3144	393	100; (Cables available for 100m+)	12–25 V, 15 W	63
FireWire 800	786	98.25	100 [11] m	12–25 V, 15 W	63
FireWire 400	393	49.13	15 Ft (4.5 m)	12–25 V, 15 W	63
USB 2.0	480	60	5 [14] m	5 V, 2.5 W	127
USB 3.0	4800	600	TBD	5 V, 2.5 W	127
Ultra -320 SCSI	2560	320	39 Ft (12 m)	No	16
Fiber Channel Over Copper Cable	4000	400	39 Ft (12 m)	No	16777216 with switches
Fiber Channel Over Fiber	10520	2000	6.5- 164000 Ft (2–50000 m)	No	16777216 with switches
Infiniband			> 32 Ft (>10 m) Copper		1 with point to point
12x quad-rate	120000	12000	<32,800 Ft (<10000 m) Fiber	No	Many W/switched Fabric

Introductions: Formatting

File Allocation Table (FAT)

FAT is a file system developed by Microsoft for MS-DOS and is the primary file system for consumer versions of Microsoft Windows.

The FAT file system is relatively uncomplicated and is supported by virtually all existing operating systems for personal computers. This makes it an ideal format for hard drives and other storage devices and a convenient way of sharing data between disparate operating systems installed on the same computer (a dual boot environment).

FAT 32 is a disk formatting scheme which allows a maximum file size of 4 GB. Larger files require another formatting type such as HFS+ or NTFS.

Microsoft's Scan-Disk utility, included with Windows 95/98, places a volume limit of 127.53 gigabytes.

FAT 32 was introduced with Windows 95 OSR2. Windows 98 introduced a utility to convert existing hard disks from FAT16 to FAT32 without loss of data. In the NT line, native support for FAT32 arrived in Windows 2000.

Windows 2000 and Windows XP can read and write to FAT32 file systems of any size, but the format program included in Windows 2000 and higher can only create FAT32 file systems of 32 GB or less. This limitation is by design and was imposed because many tasks on very large FAT32 files become slow and inefficient when file systems exceed 32GB.http://en.wikipedia.org/wiki/File_Allocation_Table_-_note-TechNet_on_FAT32 This limitation can be bypassed when using the Windows command line Format utility or by using third-party formatting utilities.

The maximum possible size for a file on a FAT32 volume is 4 GB minus 1 byte. Video capture and editing applications and some other software can easily exceed this limit.

Until mid-2006, those who run dual boot systems or who move external data drives between computers with different operating systems had little choice but to stick with FAT32. Since then, full support for NTFS has become available in Linux and many other operating systems, by installing the FUSE library (on Linux) together with the NTFS-3G application. Data exchange is also possible between Windows and Linux by using the Linux-native ext2 or ext3 file systems through the use of external drivers for Windows, such as ext2 IFS. However, Windows cannot boot from ext2 or ext3 partitions.

HFS Plus or HFS+

This is a file system developed by Apple Inc. to replace their Hierarchical File System (HFS) as the primary file system used in Macintosh computers (or other systems running Mac OS). It is also one of the formats used by the iPod digital music player. HFS Plus is also referred to as **Mac OS Extended** (or, erroneously, “HFS Extended”), where its predecessor, HFS is also referred to as *Mac OS Standard* (or, erroneously, as “HFS Standard”). During development, Apple referred to this file system with the codename *Sequoia*.

HFS Plus is an improved version of HFS, supporting much larger files (block addresses are 32-bit length instead of 16-bit) and using Unicode (instead of Mac OS Roman or any of several other character sets) for naming the items (files, folders). Names were normalized to a form very nearly the same as NFD (there are some minor differences derived from the fact that the HFS Plus format was finalized before Unicode had standardized the NFD format). HFS Plus permits filenames up to 255 UTF-16 characters in length, and n-forked files similar to NTFS, though almost no software takes advantage of forks other than the data fork and resource fork. HFS Plus also uses a full 32-bit allocation mapping table, rather than HFS’s 16 bits. This was a serious limitation of HFS, meaning that no disk could support more than 65,536 allocation blocks under HFS. When disks were small, this was of little consequence, but as larger-capacity drives became available, it meant that the smallest amount of space that any file could occupy (a single allocation block) became excessively large, wasting significant amounts of space. For example, on a 1 GB disk, the allocation block size under HFS is 16 KB, so even a 1 byte file would take up 16 KB of disk space.

HFS Plus volumes are divided into sectors (called logical blocks in HFS), that are usually 512 bytes in size. These sectors are then grouped together into allocation blocks which can contain one or more sectors. The number of allocation blocks depends on the total size of the volume. HFS Plus uses a larger value to address allocation blocks than HFS, 32 bits rather than 16 bits. This means it can access 4,294,967,296 ($=2^{32}$) allocation blocks rather than the 65,536 ($=2^{16}$) allocation blocks available to HFS.

LIMITED WARRANTY

This Limited Warranty is provided by Rocstorage, Inc. (hereinafter: Rocstor) for all lines of products.

General Terms

EXCEPT AS EXPRESSLY SET FORTH IN THIS LIMITED WARRANTY, ROCSTOR MAKES NO OTHER WARRANTIES OR CONDITIONS, EXPRESS OR IMPLIED, INCLUDING ANY IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. ROCSTOR EXPRESSLY DISCLAIMS ALL WARRANTIES AND CONDITIONS NOT STATED IN THIS LIMITED WARRANTY. ANY IMPLIED WARRANTIES THAT MAY BE IMPOSED BY LAW ARE LIMITED IN DURATION TO THE LIMITED WARRANTY PERIOD. SOME STATES OR COUNTRIES DO NOT ALLOW A LIMITATION ON HOW LONG AN IMPLIED WARRANTY LASTS OR THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR CONSUMER PRODUCTS. IN SUCH STATES OR COUNTRIES, SOME EXCLUSIONS OR LIMITATIONS OF THIS LIMITED WARRANTY MAY NOT APPLY TO YOU.

This Limited Warranty applies to the Rocstor branded hardware products sold by or leased from Rocstorage, Inc., its worldwide subsidiaries, affiliates, authorized resellers, or country distributors (collectively referred to in this Limited Warranty as “Rocstor”) with this Limited Warranty. This Limited Warranty is applicable in all countries and may be enforced in any country where Rocstor or its authorized service providers offer warranty service subject to the terms and conditions set forth in this Limited Warranty. However, warranty service availability and response times may vary from country to country and may also be subject to registration requirements in the country of purchase.

Rocstor warrants that the Rocstor hardware product and all the internal components of the product that you have purchased or leased from Rocstor are free from defects in materials or workmanship under normal use during the Limited Warranty Period. The Limited Warranty Period starts on the date of purchase or lease from Rocstor. Your dated sales or delivery receipt, showing the date of purchase or lease of the product, is your proof of the purchase or lease date. You may be required to provide proof of purchase or lease as a condition of receiving warranty service. You are entitled to warranty service according to the terms and conditions of this document if a repair to your Rocstor branded hardware is required within the Limited Warranty Period. This Limited Warranty extends only to the original purchaser or lessee of this Rocstor branded product and is not transferable to anyone who obtains ownership of the Rocstor branded product from the original purchaser or lessee.

Rocstor products are manufactured using new materials or new and used materials equivalent to new in performance and reliability. Spare parts may be new or equivalent to new. Spare parts are warranted to be free from defects in material or workmanship for thirty (30) days or for the remainder of the Limited Warranty Period of the Rocstor hardware product in which they are installed, whichever is longer.

Rocstor's Obligation under the Limited Warranty

During the Limited Warranty Period, Rocstor will repair or replace the defective component parts or the hardware product. All component parts or hardware products removed under this Limited Warranty become the property of Rocstor. The replacement part or product takes on either the Limited Warranty status of the removed part or product or the thirty (30) day limited warranty of the spare part. In the unlikely event that your Rocstor product has a recurring failure, Rocstor, at its discretion, may elect to provide you with a replacement unit of Rocstor's choosing that is at least equivalent to your Rocstor branded product in hardware performance. Rocstor reserves the right to elect, at its sole discretion, to give you a refund of your purchase price or lease payments (less interest) instead of a replacement. This is your exclusive remedy for defective products. The original Limited Warranty is not extended when the product, or a part of the product, is repaired or replaced during the Limited Warranty period. Rocstor shall not be responsible or liable for backing up any data that is on a drive being returned for service

YOU SHOULD MAKE PERIODIC BACKUP COPIES OF THE DATA STORED ON YOUR HARD DRIVE OR OTHER STORAGE DEVICES AS A PRECAUTION AGAINST POSSIBLE FAILURES, ALTERATION, OR LOSS OF THE DATA. BEFORE RETURNING ANY UNIT FOR SERVICE, BE SURE TO BACK UP DATA AND REMOVE ANY CONFIDENTIAL, PROPRIETARY, OR PERSONAL INFORMATION. ROCSTOR IS NOT RESPONSIBLE FOR DAMAGE TO OR LOSS OF ANY PROGRAMS, DATA, OR REMOVABLE STORAGE MEDIA. ROCSTOR IS NOT RESPONSIBLE FOR THE RESTORATION OR REINSTALLATION OF ANY PROGRAMS OR DATA OTHER THAN SOFTWARE INSTALLED BY ROCSTOR WHEN THE PRODUCT WAS MANUFACTURED.

Rocstor does not warrant that the operation of this product will be uninterrupted or error-free. Rocstor is not responsible for damage that occurs as a result of your failure to follow the instructions that came with the Rocstor branded product.

This Limited Warranty does not apply to expendable parts. This Limited Warranty does not extend to any product from which the serial number has been removed or that has been damaged or rendered defective (a) as a result of accident, misuse, abuse, or other external causes; (b) by operation outside the usage parameters stated in the user documentation that shipped with the product and/or posted on the Rocstor website; (c) by the use of parts not manufactured or sold by Rocstor; (d) as a result of normal wear; or (e) by modification or service by anyone other than (i) Rocstor, (ii) a Rocstor authorized service provider, or (iii) your own installation of end-user replaceable Rocstor or Rocstor approved parts if available for your product in the servicing country.

These terms and conditions constitute the complete and exclusive limited warranty agreement between Rocstor and you regarding the Rocstor branded product you have purchased or leased. These terms and conditions supersede any prior agreements or representations including representations made in Rocstor sales literature or advice given to you by Rocstor or an agent or employee of Rocstor-that may have been made in connection with your purchase or lease of the Rocstor branded product. No change to the conditions of this Limited Warranty is valid unless it is made in writing and signed by an authorized representative of Rocstor.

Buyer's Obligation under the Warranty

The person requesting coverage under this warranty shall prove that he or she is the original purchaser and declares that the product has not been sold, leased, bartered or otherwise changed possession. **The purchaser shall frequently backup the Rocpro hard drive and backup the data immediately prior to returning the drive for warranty service.**

The buyer must notify Rocstor and show proof of notification, through any reasonable means of communication. See full street address email address and toll free phone numbers below or updated contact information are available on Rocstor.com website. The notification shall identify any defect, malfunction, or nonconformity promptly upon discovery. Rocstor will acknowledge receipt of the communication and issue a Return Merchandise Authorization (RMA) code. The buyer is obligated to securely and safely package(s) the product, preferably in the original packing materials, WITH THE RMA number, and deliver it together with a copy of the original purchase receipt and a description of the problem to the Rocstor home office. Buyer is responsible for the product until it is received by Rocstor. It is recommended that the product be insured during transportation by the sender. You must prepay any shipping charges, taxes, or duties associated with transportation of the product. In addition, you are responsible for insuring any product shipped or returned for service. You assume risk of loss during shipping.

Limitation of damages (Liability)

IF YOUR ROCSTOR BRANDED HARDWARE PRODUCT FAILS TO WORK AS WARRANTED ABOVE, THE ORIGINAL PURCHASER'S SOLE AND EXCLUSIVE REMEDY SHALL BE REPAIR OR REPLACEMENT. ROCSTOR'S MAXIMUM LIABILITY UNDER THIS LIMITED WARRANTY IS EXPRESSLY LIMITED TO THE LESSER OF THE PRICE YOU HAVE PAID

FOR THE PRODUCT OR THE COST OF REPAIR OR REPLACEMENT OF ANY ROCSTOR HARDWARE COMPONENTS THAT MALFUNCTION IN CONDITIONS OF NORMAL USE. ROCSTOR IS NOT LIABLE FOR ANY DAMAGE TO ANY OTHER PRODUCT CONNECTED TO A ROCSTOR PRODUCT.

Limitation on Consequential Damages

ROCSTOR IS NOT LIABLE FOR ANY DAMAGES CAUSED BY THE PRODUCT OR THE FAILURE OF THE PRODUCT TO PERFORM, INCLUDING ANY LOST PROFITS OR SAVINGS OR SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES. ROCSTOR IS NOT LIABLE FOR ANY CLAIM MADE BY A THIRD PARTY OR MADE BY YOU FOR A THIRD PARTY. THIS LIMITATION OF LIABILITY ALSO APPLIES WHETHER DAMAGES ARE SOUGHT OR A CLAIM IS MADE UNDER THIS LIMITED WARRANTY OR AS A TORT CLAIM (INCLUDING NEGLIGENCE AND STRICT PRODUCT LIABILITY), A CONTRACT CLAIM OR ANY OTHER CLAIM. THIS LIMITATION OF LIABILITY CANNOT BE WAIVED OR AMENDED BY ANY PERSON. THIS LIMITATION OF LIABILITY WILL BE EFFECTIVE EVEN IF YOU HAVE ADVISED ROCSTOR OR AN AUTHORIZED REPRESENTATIVE OF ROCSTOR OF THE POSSIBILITY OF ANY SUCH DAMAGES.

THIS LIMITED WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY ALSO HAVE OTHER RIGHTS THAT MAY VARY FROM STATE TO STATE OR FROM COUNTRY TO COUNTRY. YOU ARE ADVISED TO CONSULT APPLICABLE STATE OR COUNTRY LAWS FOR A FULL DETERMINATION OF YOUR RIGHTS.

Disclaimer

We accept no liability for any loss of data, damages and the inability of Rocstor products to work with any third party equipment. Nor can Rocstor accept any liability or responsibility for software or third party hardware products.

Limited Warranty Period

The limited warranty period for Rocpro 850 is two (2) Years Parts and Labor. This Limited Warranty extends only to the original purchaser or lessee of this Rocstor branded product and is not transferable to anyone who obtains ownership of the Rocstor branded product from the original purchaser or lessee.

Types of Limited Warranty Service

Your Rocstor Limited Warranty consists of repair or replacement of defective parts, including hard drives identified by Rocstor Support Organization as “pre-failure.”

Carry-in Limited Warranty Service Available Monday - Friday

Under the terms of carry-in service, you may be required to deliver your Rocstor product to the Rocstor Service Center or an authorized service location for warranty repair. You must prepay any shipping charges, taxes or duties associated with transportation of the product. In addition, you are responsible for insuring any product shipped or returned for service. You assume risk of loss during shipping.

YOU SHOULD MAKE PERIODIC BACKUP COPIES OF THE DATA STORED ON YOUR HARD DRIVE OR OTHER STORAGE DEVICES AS A PRECAUTION AGAINST POSSIBLE FAILURES, ALTERATION OR LOSS OF THE DATA. BEFORE RETURNING ANY UNIT FOR SERVICE, BE SURE TO BACK UP DATA AND REMOVE ANY CONFIDENTIAL, PROPRIETARY OR PERSONAL INFORMATION. ROCSTORAGE IS NOT RESPONSIBLE FOR DAMAGE TO OR LOSS OF ANY PROGRAMS, DATA OR REMOVABLE STORAGE MEDIA. ROCSTORAGE IS NOT RESPONSIBLE FOR THE RESTORATION OR REINSTALLATION OF ANY PROGRAMS OR DATA OTHER THAN SOFTWARE INSTALLED BY ROCSTORAGE WHEN THE PRODUCT WAS MANUFACTURED.

Rocstorage shall not be responsible or liable for backing up any data that is on a drive being returned for service. Expect that all data on the drive will be destroyed and not retrievable when returned for warranty service.

Rocstor Replaceable Parts Program

Where available, the Rocstor Replaceable Parts program ships approved replacement parts directly to you to fulfill your warranty. This will save considerable repair time. After you call the Rocstor Technical Support Center at **888.877.8777** a replaceable part can be sent directly to you. Once the part arrives, call the Rocstor Technical Support Center. A technician will assist you over the phone to ensure that the installation is quick and easy.

Service Upgrades

Rocstor offers extra coverage for your product. For information on service upgrades, visit www.rocstor.com. Service upgrades purchased in one country are not transferable to another country.

Capacity Disclaimer

Actual accessible hard drive capacity will indicate up to 10% lower than stated under different Operating Systems and formatting.

The storage volume is measured in total bytes before formatting. References to round numbers of gigabytes or terabytes are an approximation only. For example, a disk drive labeled as having 500GB (Gigabytes) has space for approximately 500,000,000 bytes before formatting. After formatting, the drive capacity is reduced by about 5% to 10% depending on the operating system and formatting used or "1GB = 1,000,000,000 bytes.

Options and Software

The Limited Warranty terms and conditions for Rocstor options are as indicated in the Limited Warranty applicable to Rocstor options. ROCSTOR DOES NOT WARRANTY SOFTWARE PRODUCTS, INCLUDING ANY SOFTWARE PRODUCTS OR THE OPERATING SYSTEM PREINSTALLED BY ROCSTOR. Rocstor's only obligations with respect to software distributed by Rocstor under the Rocstor brand name are set forth in the applicable end-user license or program license agreement. Non-Rocstor hardware and software products are provided "AS IS" and without any Warranty. However, non-Rocstor manufacturers, suppliers or publishers may provide their own warranties directly to you.

The data stored in Rocstor and Rocsecure storage product lines are not guaranteed by Rocstor (or the hard disk manufacturer.) We are not responsible for any loss of data. Always back up data regularly

TECHNICAL SUPPORT

Software Technical Support

Software technical support is defined as assistance with questions and issues about the software that was either preinstalled by Rocstor on the Rocstor branded product or that was included with the Rocstor branded product at the time of your purchase or lease of the product. Technical support for software is available for the first ninety (90) days from date of product purchase or lease. Your dated sales or delivery receipt, showing the date of purchase or lease of the product, is your proof of the purchase or lease date. You may be required to provide proof of purchase or lease as a condition of receiving software technical support. After the first ninety (90) days, technical support for software that was either preinstalled by Rocstor on the Rocstor branded product or included with the Rocstor branded product at the time of your purchase or lease of the product is available for a fee.

WARNING: The individual user should take care to determine prior to use whether this device is suitable, adequate or safe for the use intended. Since individual applications are subject to great variation, the manufacturer

Contact Information

Corporate Headquarters

8130 Remmet Avenue
Canoga Park, CA 91304-4129
Office: +1 (818) 449-2000
Fax: +1 (818) 884-8777
Email: info@Rocstor.com

Technical Support / RMA

Tel: (888) 877-7716 (USA and Canada)
Tel: +1 (818) 449-2000 (Domestic and Internationals)
Fax: +1 (818) 884-8777
Hours: 9:00 am - 5:00 pm PST
Mon - Fri (excluding holidays)
Email: support@Rocstor.com

Sales Info

Hours: 8:00 am - 5:00 pm PST
Mon - Fri (excluding holidays)
Email: sales@Rocstor.com
Tel: (888) 877-7716
Fax: (818) 884-8777

Corporate, Government and Academic Customers

Our Corporate Sales Team's goal is to help our U.S.A. and Canadian customers find a storage solution that best serves their needs. We will help you determine your best purchasing options. For more information please contact the appropriate department below or call us at +1 (888) 877-7716

General sales information: sales@Rocstor.com
Corporate sales information: corporate_sales@Rocstor.com
Educational sales information: academic_sales@Rocstor.com
Federal, State & Local government sales information: government_sales@Rocstor.com

Resellers/Business Development/OEM Partners

All Channel National and International Resellers, VARs, Consultants ... contact Rocstor Channel Sales:
In U.S., call: 888.877.7716
Out of USA call +1.818.449.2000
Email: reseller_info@Rocstor.com



Available in Silver, Red, White, and Black

Thank you for purchasing Rocpro 850.

Rocstor

Ver.0426I